

AVATAR INSTRUMENTS MTP MANUAL

DESCRIPTION The MTP interface module is designed to convert a variety of input signal types (including 0-20mA, DC voltage, 135 ohm thermostat and 100-1000 ohm potentiometer) to a fast pulsed 20VDC signal capable of driving one or many Solid State Relays (SSR's). The MTP also features a 63-100% output limit adjustment. The MTP interface comes standard with a 500 ohm potentiometer w/ two feet of wire, 0-100% dial and knob for panel mounting.

INSTALLATION



WARNING: FIRE HAZARD!! Even the best electronic components CAN FAIL SHORTED, KEEPING FULL POWER ON! Provide a completely SEPARATE (redundant) OVER TEMPERATURE SHUTDOWN MEANS to switch power off if safe temperature is exceeded.



WARNING: HIGH VOLTAGE!! This control must be installed in a GROUNDED enclosure by a qualified electrician. Provide a safety interlock on door to remove power before gaining access to device.

ELECTRICAL CONNECTIONS See "WIRING DIAGRAM" on back. Wiring must be performed in accordance with any and all applicable local and national codes.

SPECIFICATIONS

INPUT SIGNAL:

POT 100-1000 ohm (500 ohm optimum)
0-20mA..... <1.5V (75 ohm input Z)
DC Voltage input consult Avatar

OUTPUT SIGNAL: 0-20VDC (pulsed)

OUTPUT IMPEDANCE: 68 ohms (50mA max.)

ISOLATION:

LINE - SIGNAL..... 2500 VAC
INPUT - OUTPUT not isolated

REGULATION: zener voltage regulated, OP amp controlled current source

POWER REQUIREMENT: 5W @ 120V, 208-277V, and 480V

WEIGHT: 1 lb.

WARRANTY

All Avatar Instruments products carry a full three year, from date of purchase, parts and labor warranty against component failure and defects in workmanship. In the event your controller fails to perform properly, **contact Avatar to obtain a return authorization number**. Controllers sent to Avatar for warranty service that have no apparent defect will be treated as a standard repair and a \$50.00 charge will be applied. Avatar will repair or replace any unit that failed due to defective parts or assembly. This warranty DOES NOT cover damage due to shipping, abuse, misapplication or operation beyond specified rating. Avatar is not responsible for any subsequent or other damage experienced in use of this device.

Avatar Instruments, Inc.
Phone: (610) 543-5155
www.scrpower.com

577 Abbott Drive
Fax: (610) 543-5255

Broomall, PA 19008

PHYSICAL DIMENSIONS & WIRING DIAGRAMS MTP

